

shop.shift74.ru

Shift Computers

Блок питания 19V 3.42A Toshiba OEM

900 руб ±.



Блок питания, DC, 19V, 3.42A:

Входное напряжение: AC 100-240V

Выходное напряжение: DC 19V (19.5V, 19.0V, 18.5V, 18.0V, 17.5V, 17.0V, 16.5V, 16.0V, 15.5V, 15.0V, 14.5V, 14.0V, 13.5V, 13.0V, 12.5V, 12.0V, 11.5V, 11.0V, 10.5V, 10.0V, 9.5V, 9.0V, 8.5V, 8.0V, 7.5V, 7.0V, 6.5V, 6.0V, 5.5V, 5.0V, 4.5V, 4.0V, 3.5V, 3.0V, 2.5V, 2.0V, 1.5V, 1.0V, 0.5V, 0V)

Выходной ток: DC 3.42A

Мощность: 65W

Диаметр штыря: 2.5 mm

Длина штыря: 5.5 m

Высота: 12 mm

Блок питания, DC, 19V, 3.42A:

TOSHIBA

Toshiba Satellite A105 Series: A105 / A105-S101 / A105-S1012 / A105-S1013 / A105-S1014 / A105-S101X / A105-S171 / A105-S1712 / A105-S171x / A105-S2001 / A105-S2011 / A105-S2021 / A105-S2031 / A105-S2051 / A105-S2061 / A105-S2071 / A105-S2081 / A105-S2091 / A105-S2101 / A105-S2111 / A105-S2121 / A105-S2131 / A105-S2141 / A105-S2194 / A105-S2201 / A105-S2204 / A105-S2231 / A105-S2236 / A105-S271 / A105-S2712 / A105-S2713 / A105-S2716 / A105-S2717 / A105-S2719 / A105-S271X / A105-S361 / A105-S3611 / A105-S361X / A105-SP2012 / A105-SP461 5-SP461 Toshiba Satellite A100 Series: A100-151 / A100-163 / A100-188 / A100-209 / A100-259 / A100-295 / A100-500 / A100-507 / A100-508 / A100-521 / A100-522 / A100-523 / A100-525 / A100-533 / A100-570 / A100-649 /

A100-S2211 / A100-S2211TD / A100-S3211TD / A100-S8111 / A100-S8111TD / A100-SP2022 /
A100-SP621 / A100-ST2311 / A100-ST3211 -ST3211 Toshiba Satellite A110 Series: A110-101 / A110-177 /
A110-178 / A110-203 / A110-260 / A110-289 / A110-339 / A110-370 Toshiba Satellite A130 Series: A130 /
A130-ST1311 / A130-ST1313 Toshiba Satellite A135 Series: A135 / A135-S2246 / A135-S2256 /
A135-S2266 / A135-S2276 / A135-S2286 / A135-S2296 / A135-S2306 / A135-S2326 / A135-S2346 / A135-
S2356 / A135-S2376 / A135-S2386 / A135-S2396 / A135-S4407 / A135-S4417 / A135-S4427 / A135-S4437 /
A135-S4447 / A135-S4457 / A135-S4467 / A135-S4477 / A135-S4478 / A135-S4487 / A135-S4488 / A135-
S4499 / A135-S4517 / A135-S4527 / A135-S4656 / A135-S4677 / A135-S4827 / A135-SP4016 /
A135-SP4036 / A135-SP4048 / A135-SP4058 / A135-SP4088 / A135-SP4108 / A135-SP4156 Toshiba
Satellite A200 Series: A200-10W / A200-10X / A200-10Z / A200-11C / A200-12F / A200-13L / A200-13O /
A200-13R / A200-13T / A200-13U / A200-14D / A200-14E / A200-180 / A200-18T / A200-19I / A200-19K /
A200-19M / A200-1A9 / A200-1AA / A200-1AB / A200-1AE / A200-1Ai / A200-1BP / A200-1BW / A200-1CC /
A200-1CR / A200-1DA / A200-1DN / A200-1DQ / A200-1FJ / A200-1G6 / A200-1GD / A200-1HU / A200-1M7
/ A200-ST2041 / A200-ST2043 Toshiba Satellite A205 Series: A205 / A205-S4537 / A205-S4557 /
A205-S4567 / A205-S4577 / A205-S4578 / A205-S4587 / A205-S4597 / A205-S4607 / A205-S4617 / A205-
S4618 / A205-S4629 / A205-S4638 / A205-S4639 / A205-S4647 / A205-S4707 / A205-S4777 / A205-S4797 /
A205-S7456 / A205-SP4038 / A205-SP4068 Toshiba Satellite A215 Series: A215-S4697 / A215-S4717 /
A215- S4737 / A215-S4747 / A215-S4757 / A215-S4767 / A215-S4807 / A215-S4817 / A215-S48171 /
A215-S7407 / A215-S7408 / A215-S7414 / A215-S7418 / A215-S7421 / A215-S7422 / A215-S7427 /
A215-S7433 / A215 -S7437 / A215-S7444 / A215-S7447 / A215-S7462 / A215-SP401 Toshiba Satellite A85
Series: A80-S178 / A85-S107 / A85-S1071 / A85-S1072 / A85-SP107 / A85-SP1072 Toshiba Satellite L10
Series: L10-100 / L10-101 / L10-104 / L10-105 / L10-130 / L10-154 / L10-190 / L10-194 / L10-226 / L10-272 /
L10-SP104 Toshiba Satellite L15 Series: L15 / L15-S104 / L15-S1041 / L15 -SP104 / L15-SP1041 Toshiba
Satellite L20 Series: L20-101 / L20-112 / L20-118 / L20-120 / L20-121 / L20-135 / L20-155 / L20-157 /
L20-159 / L20-173 / L20-188 / L20-205 / L20-256 / L20-S310 / L20-S310TD / L20-SP119 / L20-SP131 /
L20-SP131 / L20-SP231 / P205-S6237 Toshiba Satellite L25 Series: L25 / L25-S119 / L25-S1192 / L25
-S1193 / L25-S1194 / L25-S1195 / L25-S1196 / L25-S121 / L25-S1212 / L25-S1213 / L25-S1215 / L25-
S1216 / L25-S1217 / L25-SP121 / L25-SP129 / L25-SP139 / L25-SP141 / L25-SP151 Toshiba Satellite L30
Series: L30 / L30-10P / L30-114 / L30-115 / L30-11E / L30-11H / L30-134 / L30-140 / L30-142 Toshiba
Satellite L35 Series: L35 / L35-S1054 / L35-S2151 / L35-S2161 / L35-S2171 / L35-S2174 / L35-S2194 /
L35-S2316 / L35-S2366 / L35-SP1011 / L35-SP2011 / L35-SP2031 / L35-SP2041 / L35-SP2051 /
L35-SP2071 / L35-SP4016 / L35-SP4068 / L35-SP4086 / L35- SP4096 / L35-SP4116 Toshiba Satellite L45
Series: L45-S2416 / L45-S4687 / L45-S7409 / L45-S7419 / L45-S7423 / L45-S7424 / L45-SP2036 /
L45-SP2046 / L45-SP2056 / L45-SP2066 / L45- SP4016 Toshiba Satellite M105 M115 Series: M105-S1011 /
M105-S1021 / M105-S1031 / M105-S1041 / M105-S10xx / M105-SP1011 / M105-SP1021 / M105-SP1031 /
M105-SP1041 / M115-S1061 / M115-S1064 / M115-S1071 / M115-S1074 Toshiba Satellite M200 M205
Series: M200-ST2002 / M205-S3207 / M205-S3217 / M205-S7452 / M205-S7453 Toshiba Satellite M30X
Series: M30X / M30X-1593 / M30X-214 / M30X-40 / M30X-60 / M30X-80 / M30X-S114 / M30X-S1592 /
M30X-S1593 / M30X-S171 / M30X-S181 / M30X- S191 / M30X-S214 / M30X-S221 / M30X-s234 /
M30X-SP111 / M30X-SP114 Toshiba Satellite M35X Series: M35X / M35X-114 / M35X-149 / M35X-S109 /
M35X-S111 / M35X-S114 / M35X-S1141 / M35X-S1142 / M35X-S1143 / M35X-S149 / M35X-S1491 /
M35X-S1492 / M35X-S161 / M35X-S1611 / M35X-S163 / M35X-S1631 / M35X-S309 / M35X-S3091 / M35X-
S311 / M35X-S3111 / M35X-S3112 / M35X-S329 / M35X-S3291 / M35X-S349 / M35X-S3491 / M35X-SP111
/ M35X-SP114 / M35X-SP161 / M35X-SP171 / M35X-SP181 / M35X-SP311 / M35X-SP349 Toshiba Satellite
M40 M45 Series: M40-S312TD / M45-S165 / M45- S1651 / M45-S165X / M45-S169 / M45-S1691 Toshiba
Satellite M55 Series: M55-S1001 / M55-S139 / M55-S1391 / M55-S139X / M55-S141 Toshiba Satellite M60
M65 Series: M60-S811 / M60-S8112 / M60- S9093 / M65-S809 / M65-S8091 / M65-S8092 / M65-S821 /
M65-S8211 / M65-S9062 / M65-S9063 / M65- S9064 / M65-S9065 / M65-S909 / M65-S9091 / M65-S9092 /
M65-SP811 / M65-SP959 Toshiba Satellite P205 Series: P205D-S7429 / P205D-S7438 / P205D-S7439 /
P205D-S7454 / P205-S6237 / P205-S6247 / P205-S6257 / P205-S6267 / P205-S6287 / P205 -S6297 /
P205-S6298 / P205-S6307 / P205-S6337 / P205-S6347 / P205-S6348 / P205-S7469 Toshiba Satellite U305
Series: U305 / U305-S5077 / U305-S5087 / U305-S5097 / U305-S5107 / U305-S5117 / U305-S5127 /
U305-S7432 / U305-S7446 / U305-S7448 / U305- S7467 / U305-S7477 / U305-SP5017 / U305-SP5028 /

